

# W-DMX Quick Start Guide

1) Make all signal and power connections to transmitter and receivers.

2) Push the function button on the transmitter momentarily. This starts the automatic log on.

3) The Link LED indicator will go from rapid flashing to static on to indicate successful log on.

4) The Transmitter and Receiver(s) are now logged on and will remain logged on until powered down.

Note: If utilizing more than one universe, the first universe must be powered and synchronized separately. After it has synchronized you may leave it connected while adding any additional universes.



## Transmitter LED Status

Light Status	What It Means
<b>Link LED Status</b>	
On	Receiver(s) are logged in to this transmitter
Flashing	Logging out all receivers that are logged in
Rapid Flashing	Logging in all free receivers that are in range
<b>Data LED Status</b>	
On	DMX Data Is Being Transmitted

## Receiver LED Status

Light Status	What It Means
<b>Link LED Status</b>	
Off	Not logged on to a transmitter
On	Logged into a transmitter
Rapid Flashing	Logging into a transmitter
<b>Data LED Status</b>	
On	DMX data is being received

Note:  
 To clear all Receivers and restart, press and hold the Transmitter function button for 5 seconds.  
 To remove a single receiver, press and hold that Receiver's function button for 5 seconds.

